


Bearing Plate Spacer Instructions

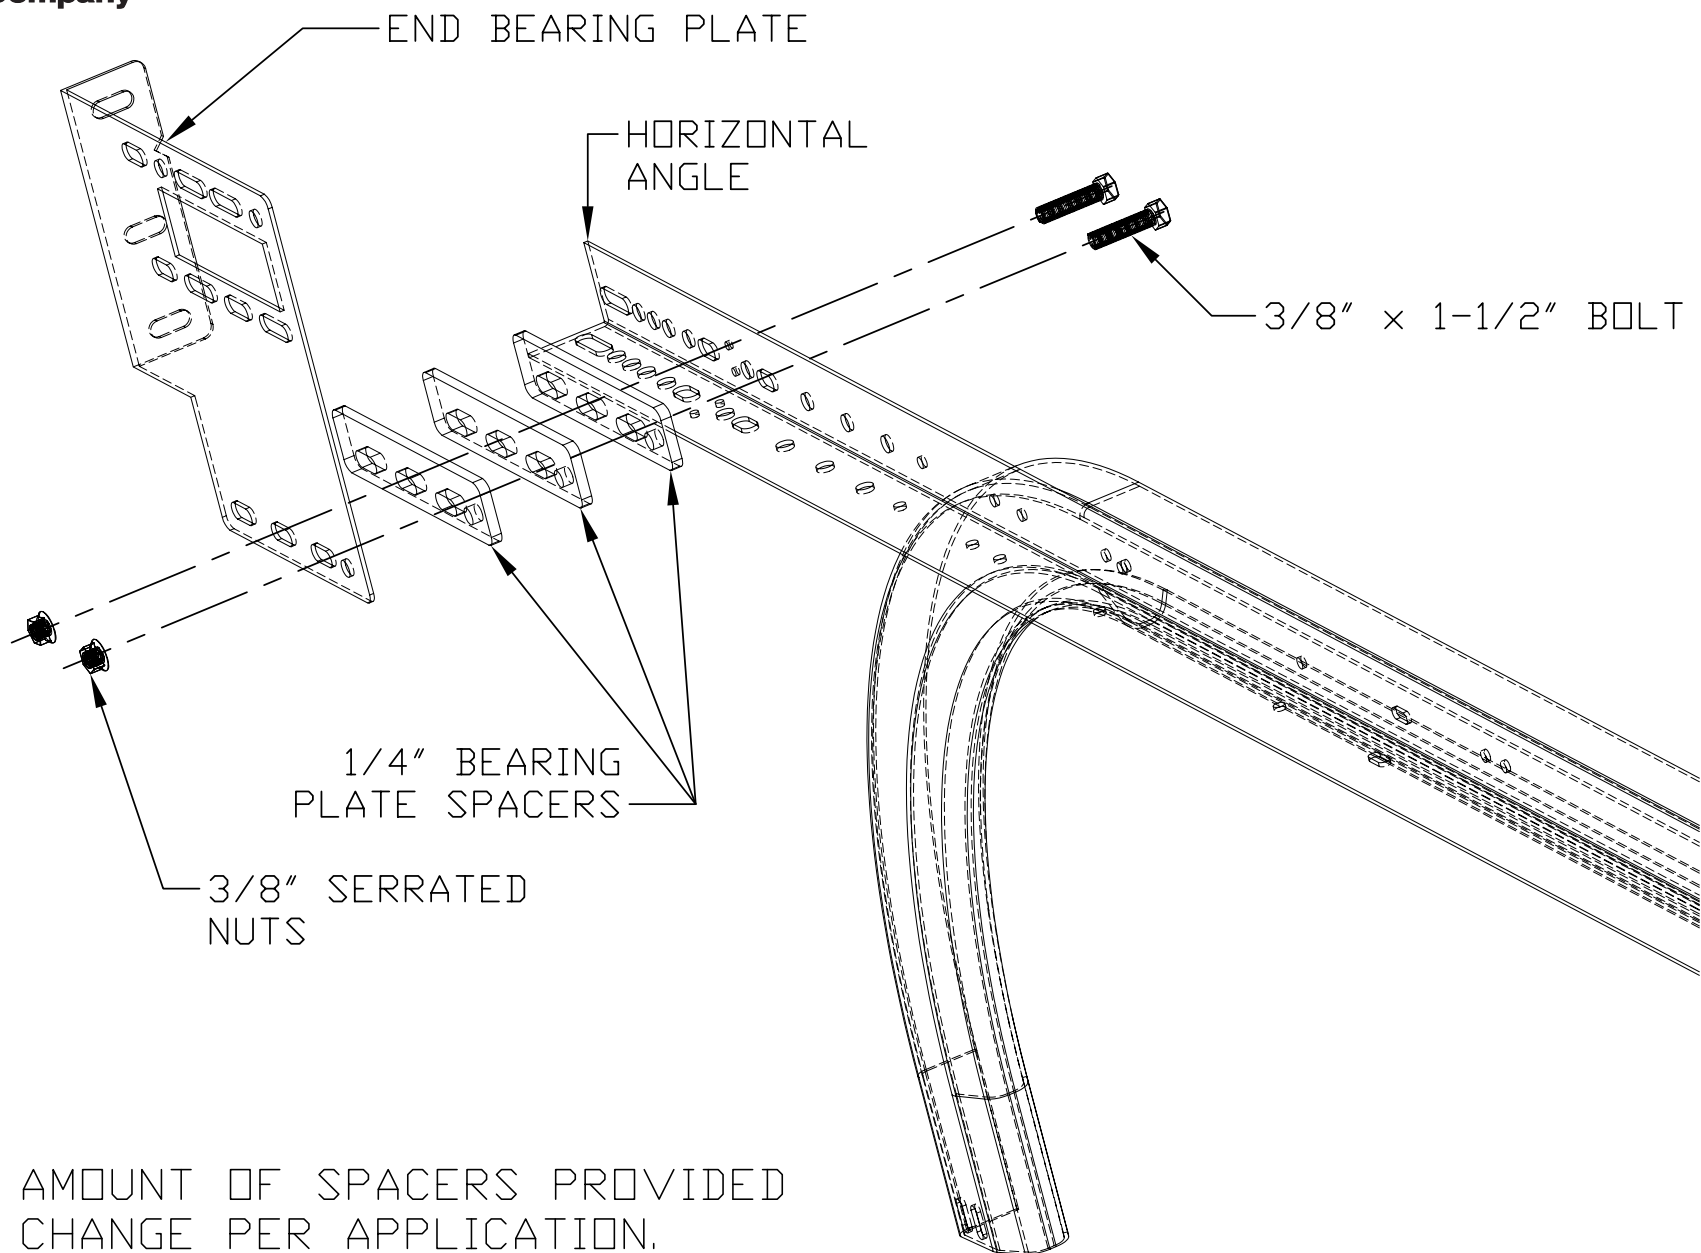

*THE AMOUNT OF SPACERS PROVIDED
WILL CHANGE PER APPLICATION.